


How to Operate the HYGIENICA Electro·Hygiene System™

HYGIENICA™ is committed to our technology being used by highly-trained Disinfecting Specialists for the purpose of mitigating the effects of COVID-19. Prior to using our system, we recommend that you complete our training program at hygienica.net/training.

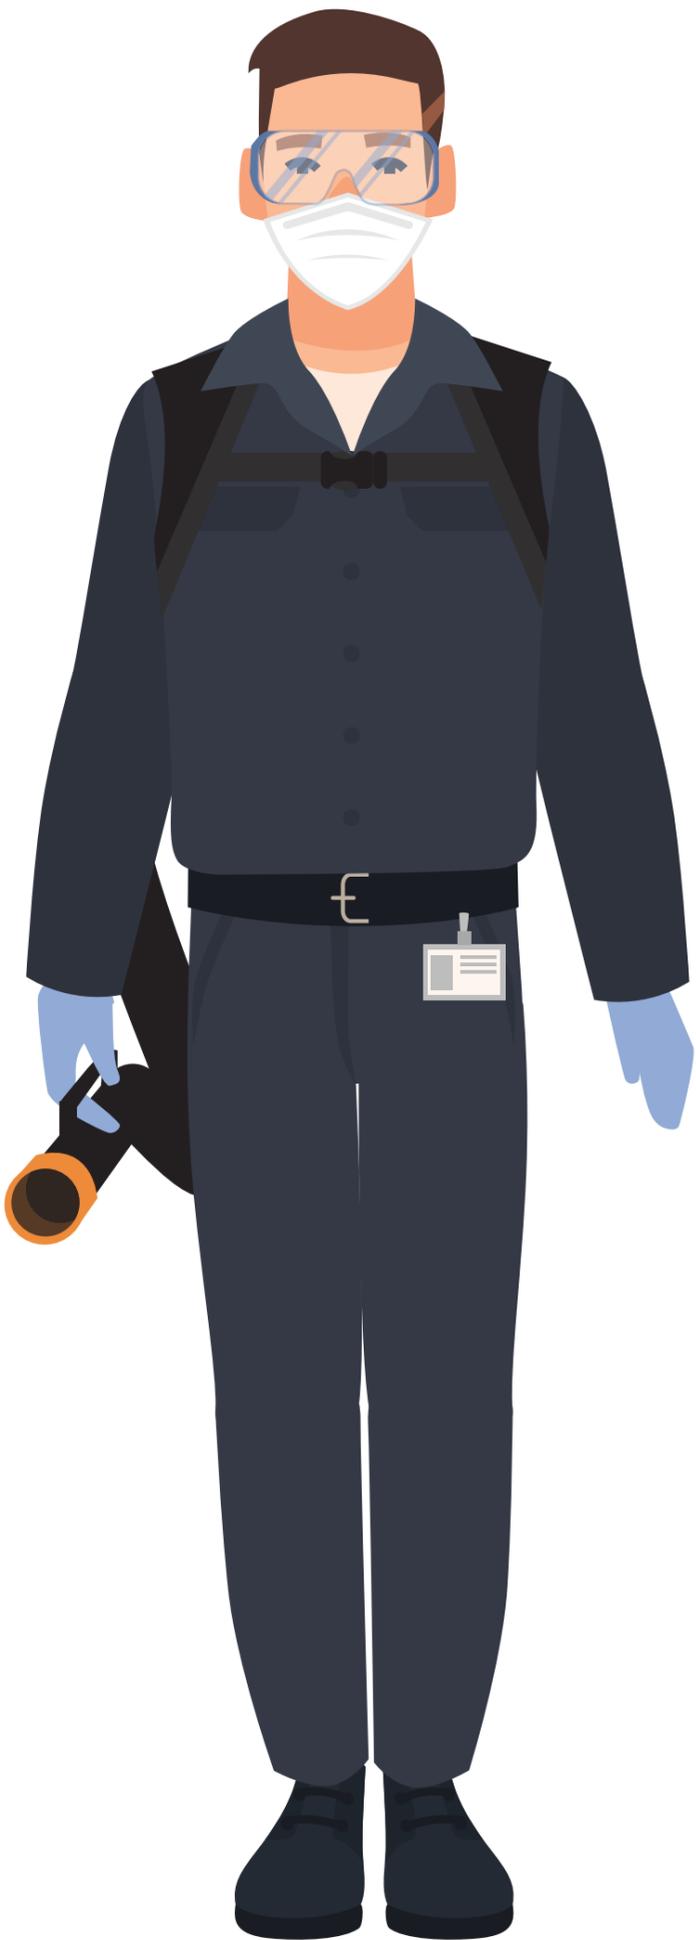

Step 1. Check your cord and hose fittings

Always conduct a thorough inspection of cord and hose fittings prior to each use.

Step 2. Wear the appropriate PPE

At a minimum, HYGIENICA™ recommends gloves, goggles and a mask, however please refer to the Safety Data Sheet of your disinfectant solution for recommended levels of personal protective equipment.

Step 3. Connect to an extension cord

Using a pigtail knot, connect unit to a minimum 14 gauge extension cord, no longer than 75 feet.

Step 4. Fill tank with solution

Fill tank with desired solution. If using a hydrogen peroxide-based solution, make sure it is properly diluted. Alcohol-based solutions should not be used. If using as backpack, do not fill past maximum fill line. If using as a handheld device, do not fill with more than a gallon of solution. Make sure tank cap is securely tightened.

Step 5. Turn unit on

Grab the wand, open the valve and power on.

Step 6. Adjust the nozzle

Adjust the flow of solution based on the surface type you are disinfecting.

Step 7. Proper application distance

Stand no less than 3 feet from the surface you are spraying. Hard to reach areas can be reached up to 12 feet away by adjusting the nozzle.

Step 8. Proper application method

Use a steady back and forth motion to ensure that every surface is coated with disinfectant solution. You may allow solution to air dry. If you wish to wipe off the solution, refer to your SDS sheet for proper dwell time.